

FIG.1A

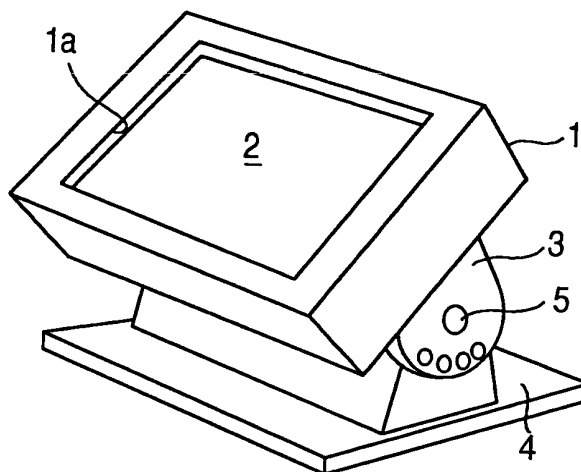 


FIG.1B

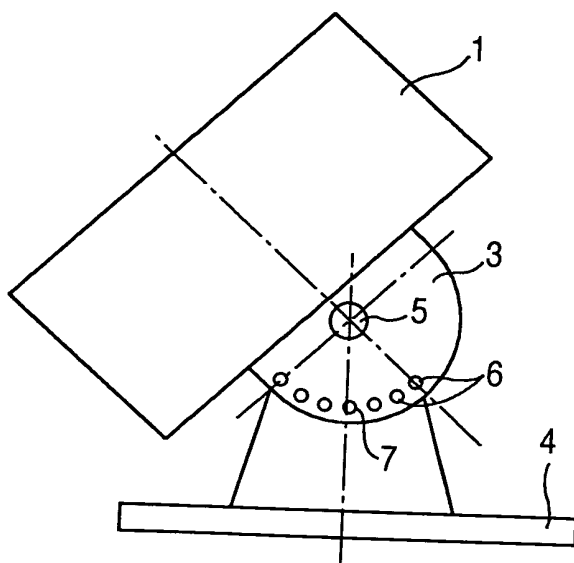 


FIG.1C

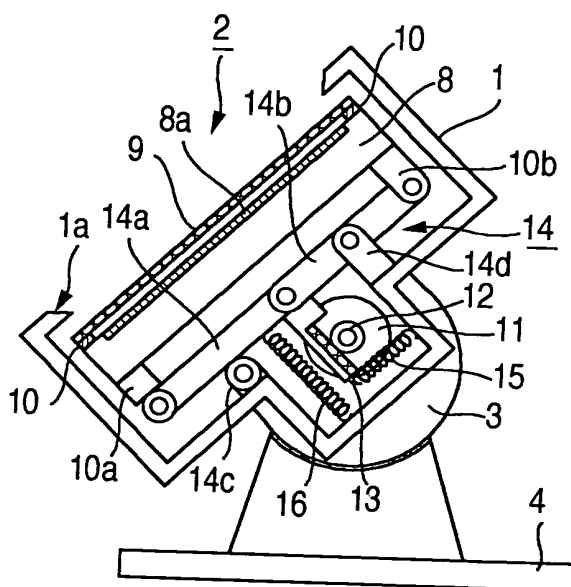 


FIG.2



FIG.3A

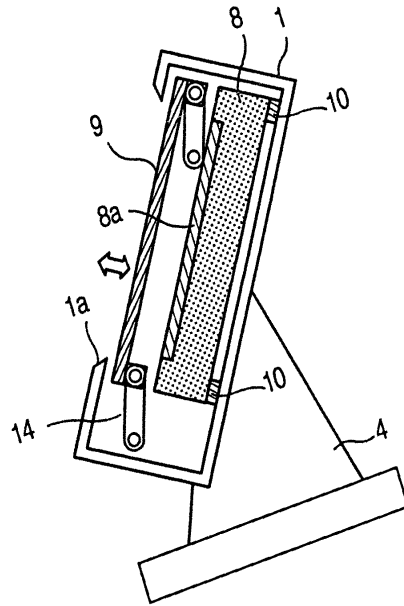 


FIG.3B

 
 
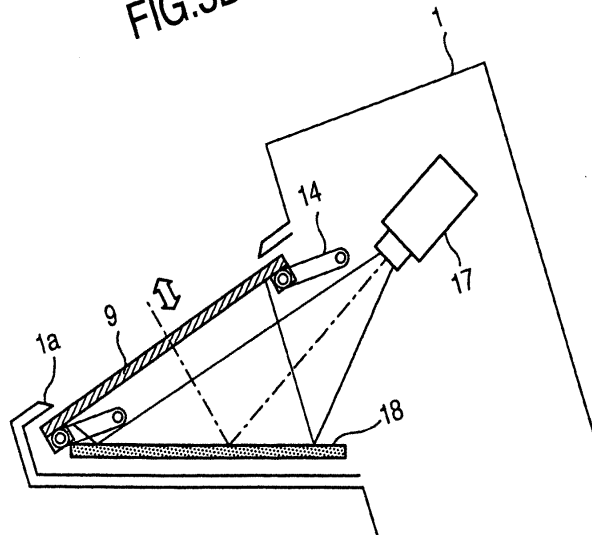 


FIG.4

(a)

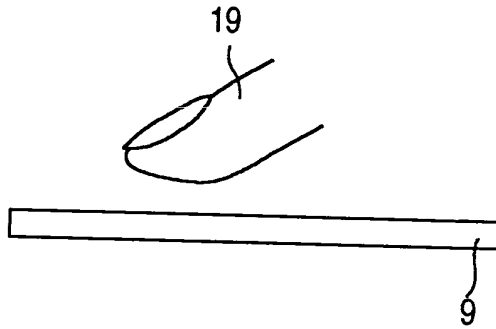

(b)

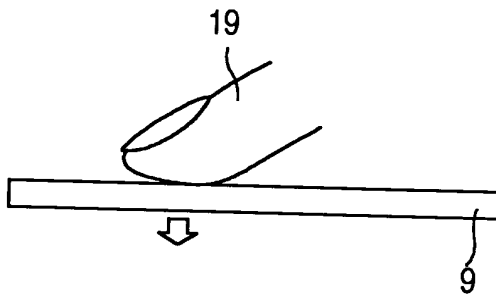

(c)

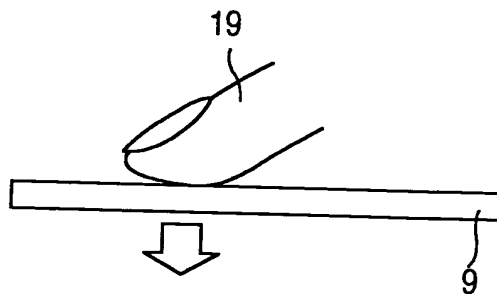 


FIG.5

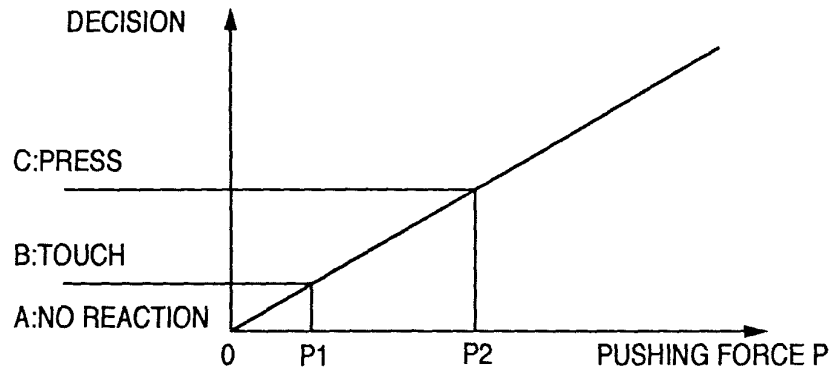 


FIG.6

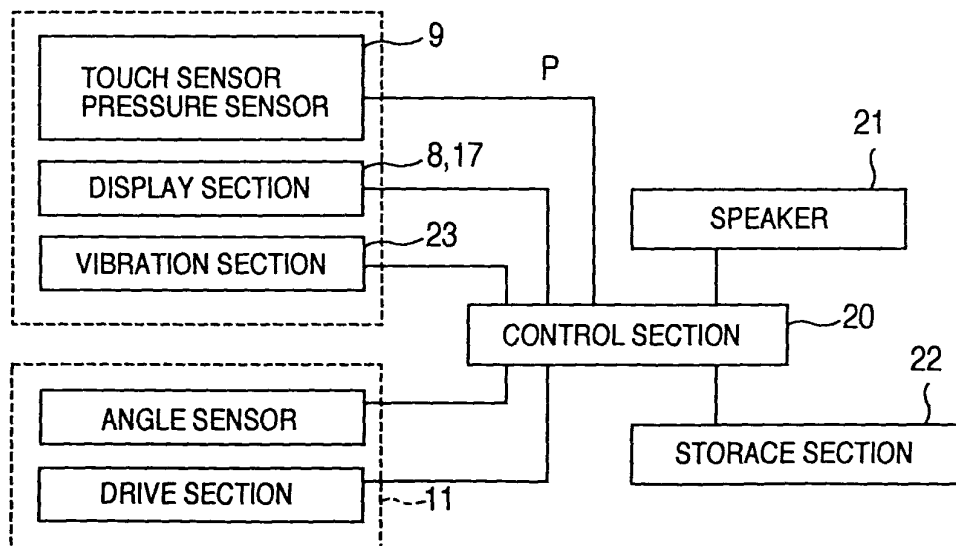 


FIG.7A

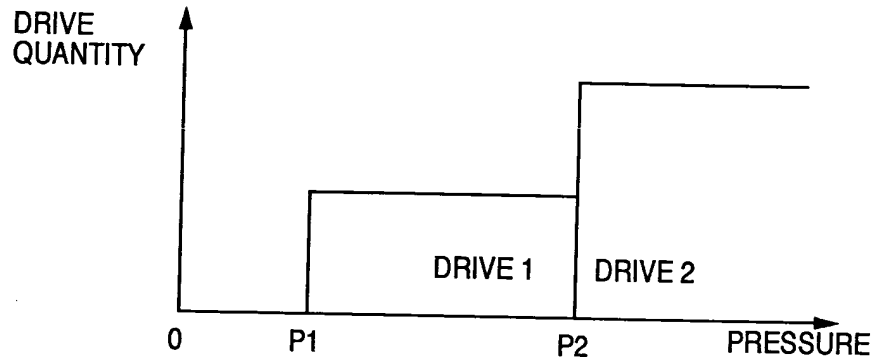 


FIG.7B

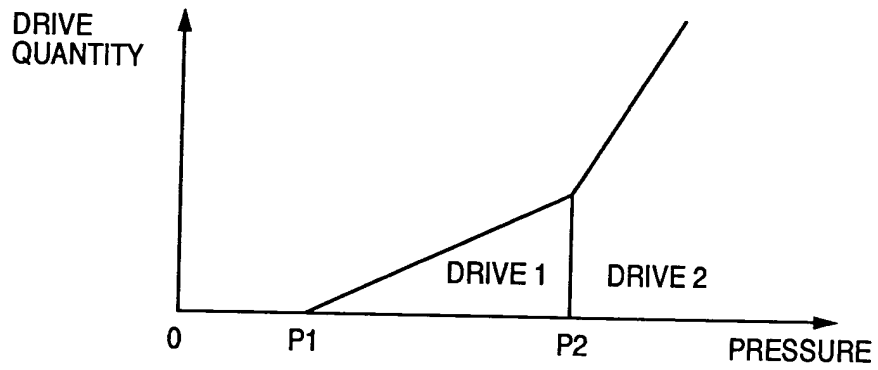 


FIG.7C

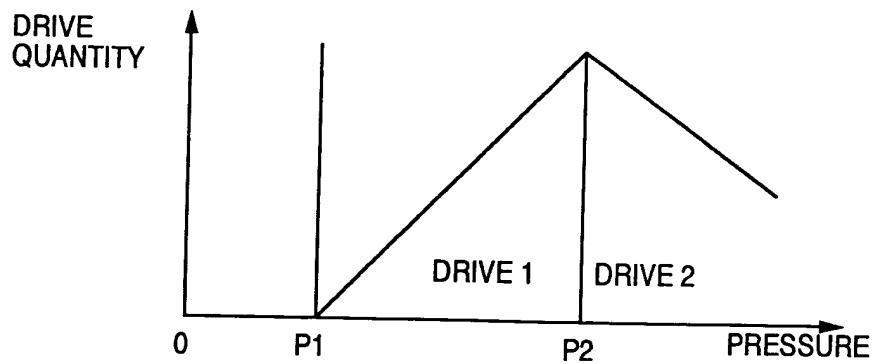 


FIG.8

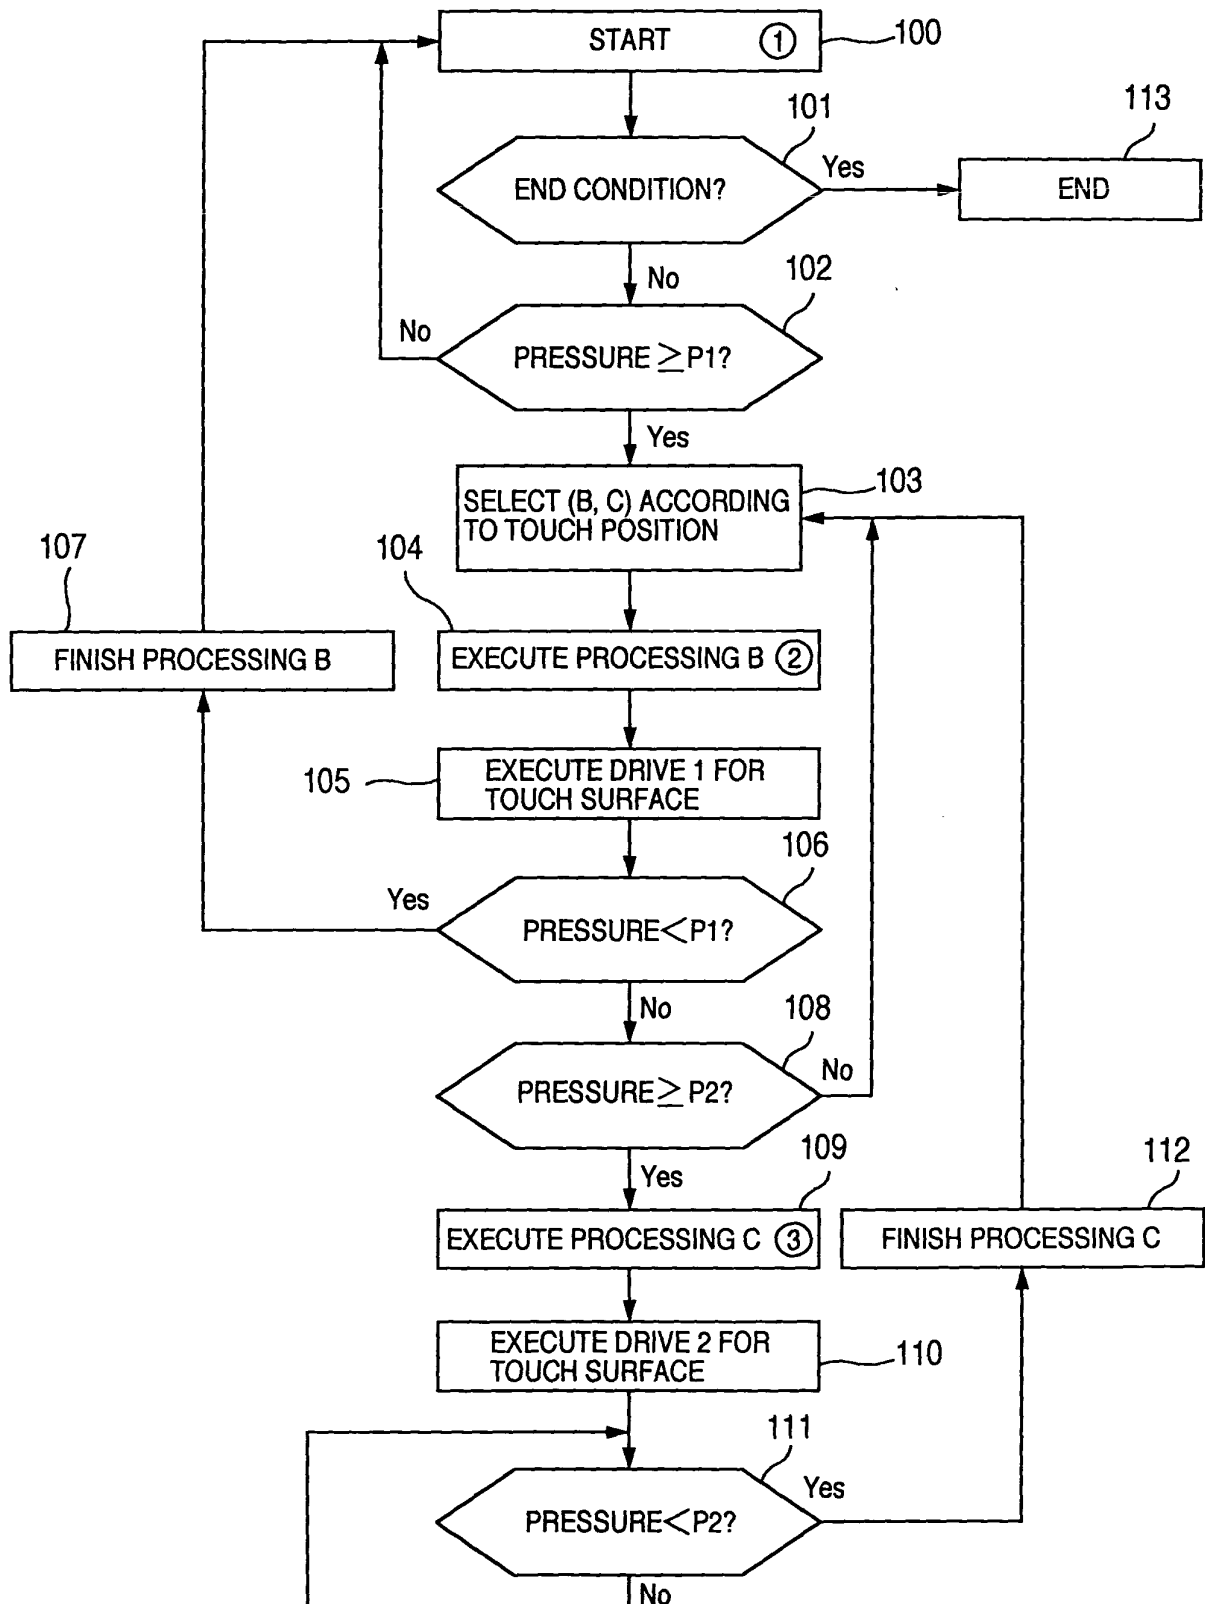 


FIG.9A

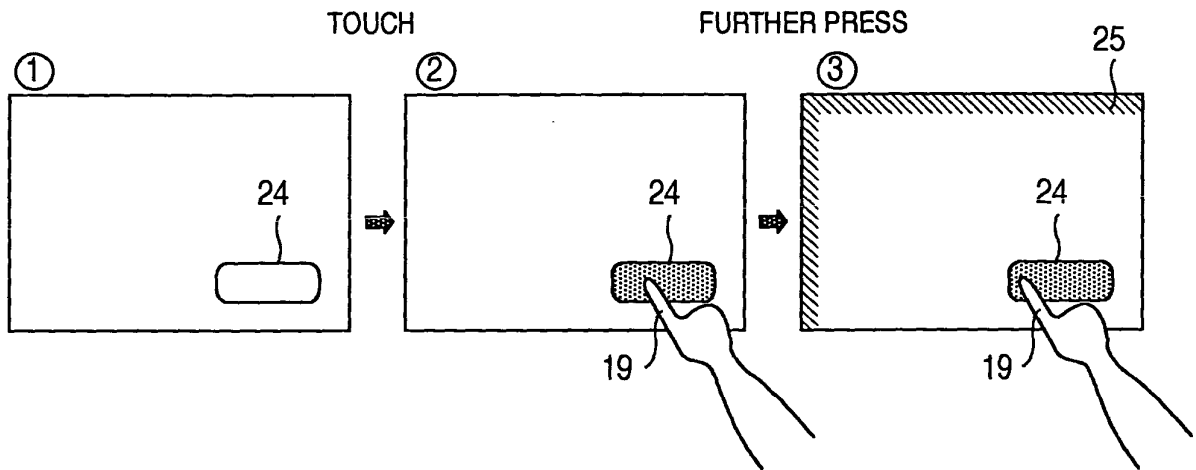 


FIG.9B

 
 
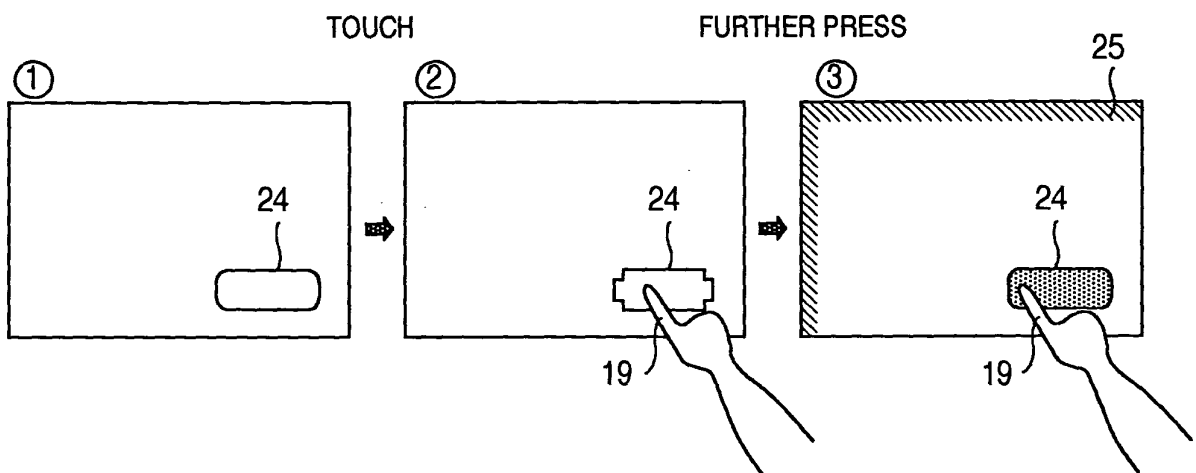 


FIG.9C

 


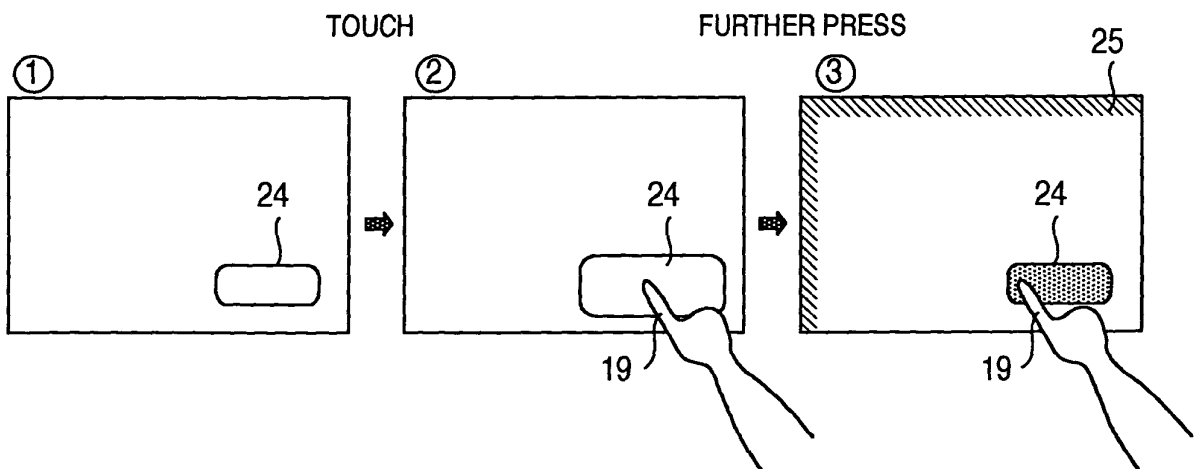

# FIG.10A

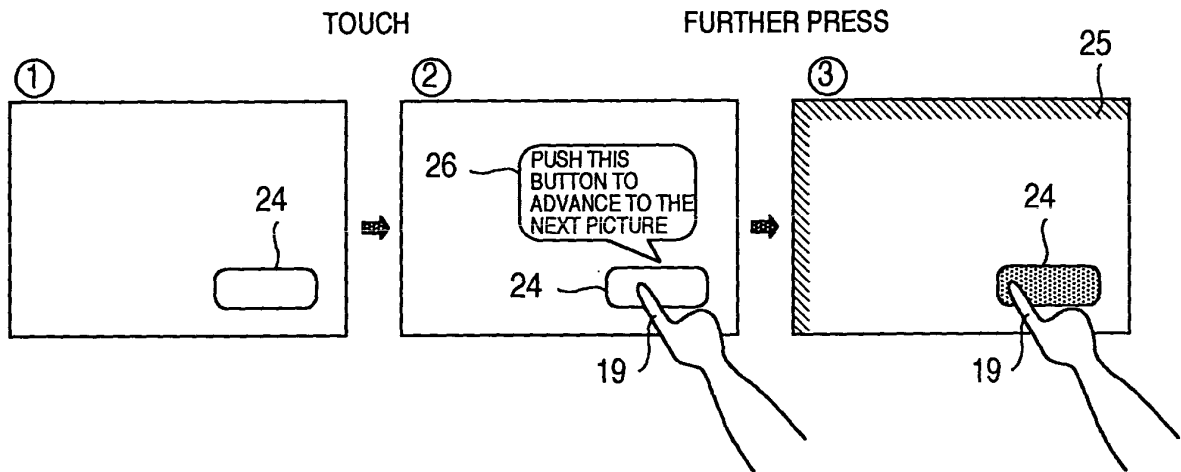

# FIG.10B

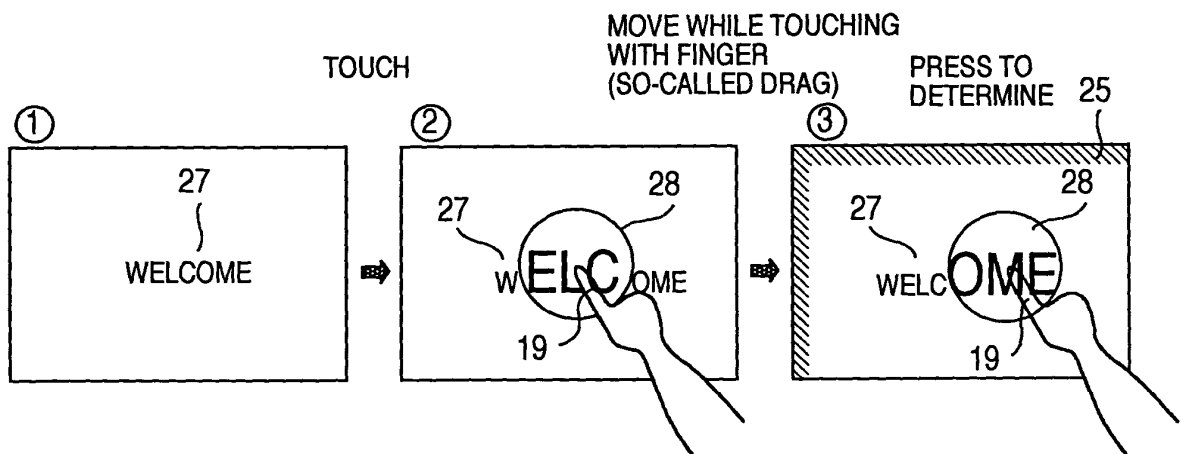

# FIG.10C

 
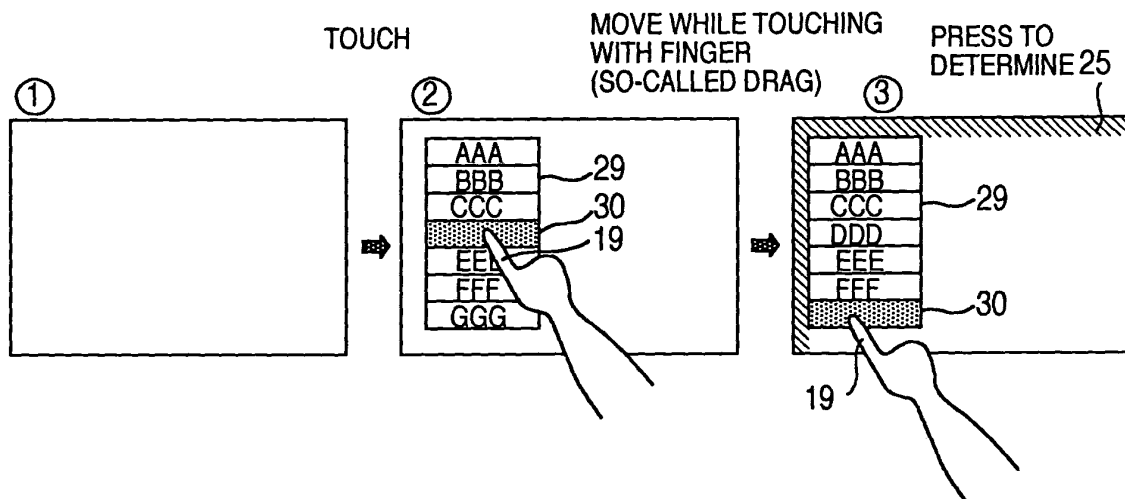 


FIG.11A

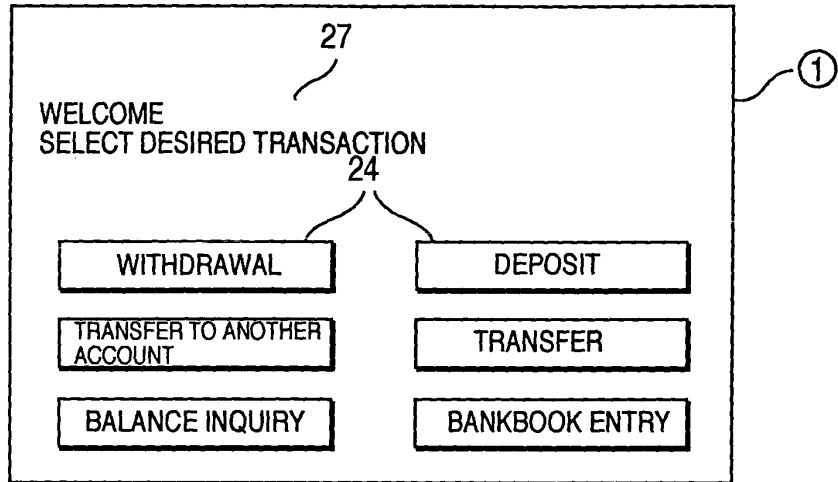

TOUCH

FIG.11B

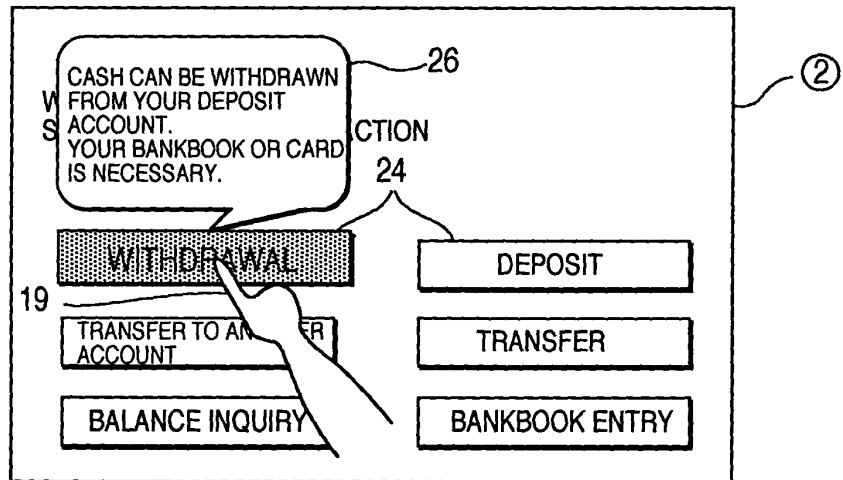 


FIG.11C

 
 
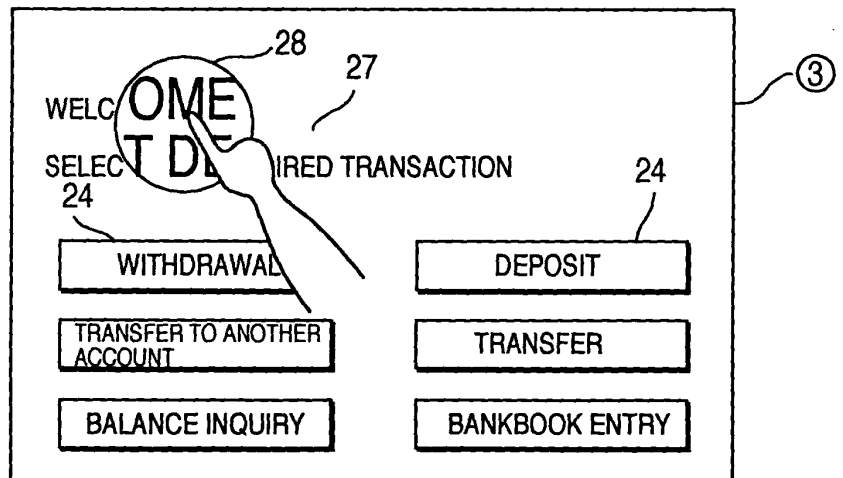 


FIG.12A

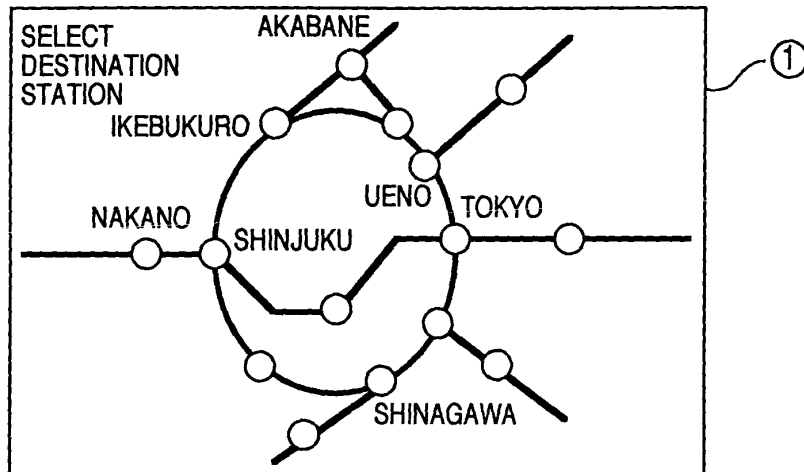

TOUCH

FIG.12B

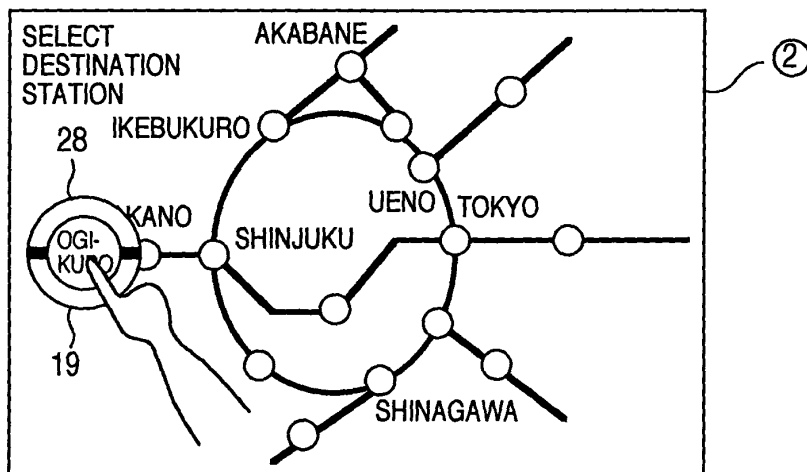

PRESS

FIG.12C

CANCEL

PUT YOUR CASH OR CARD INTO THE MACHINE

TICKET	TO OGIKUBO
AMOUNT OF PURCHASE MONEY	¥160
AMOUNT OF MONEY PUT INTO THE MACHINE	¥0

③

FIG.13

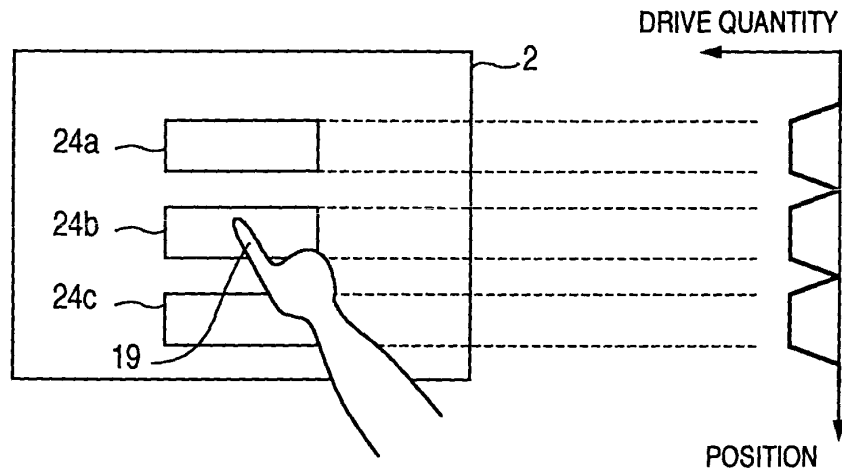 


FIG.14A

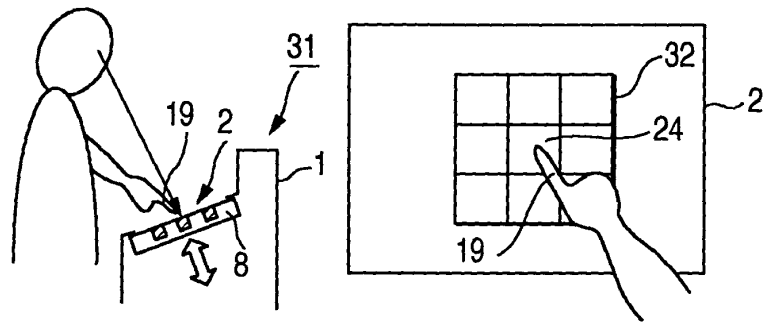 


FIG.14B

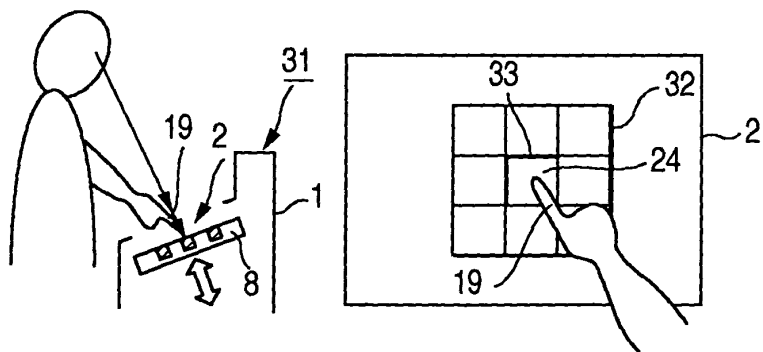 


FIG.15A

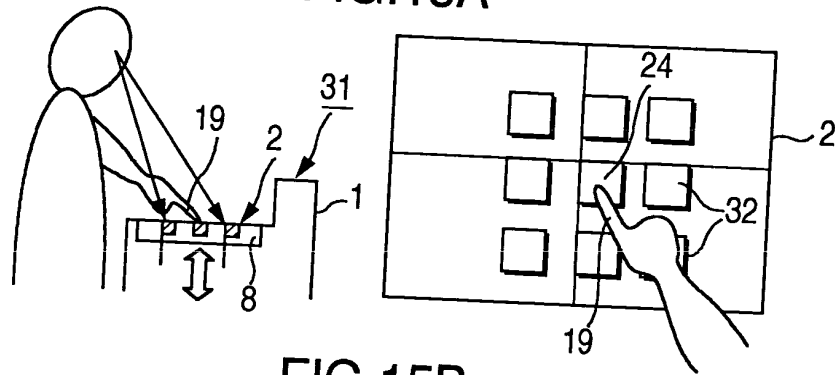 


FIG.15B

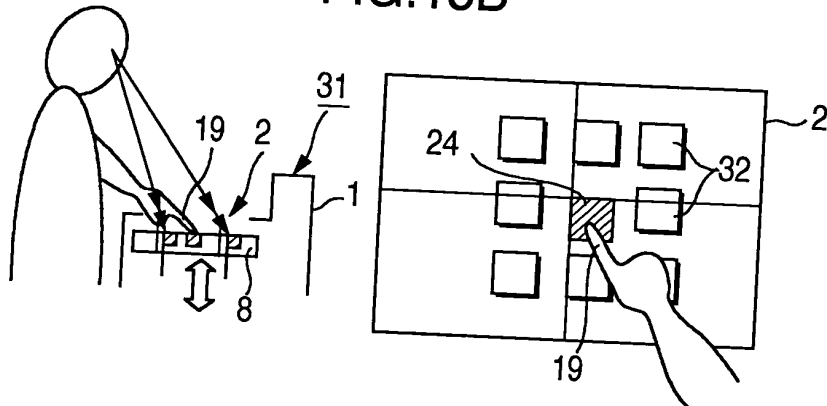 


FIG.16

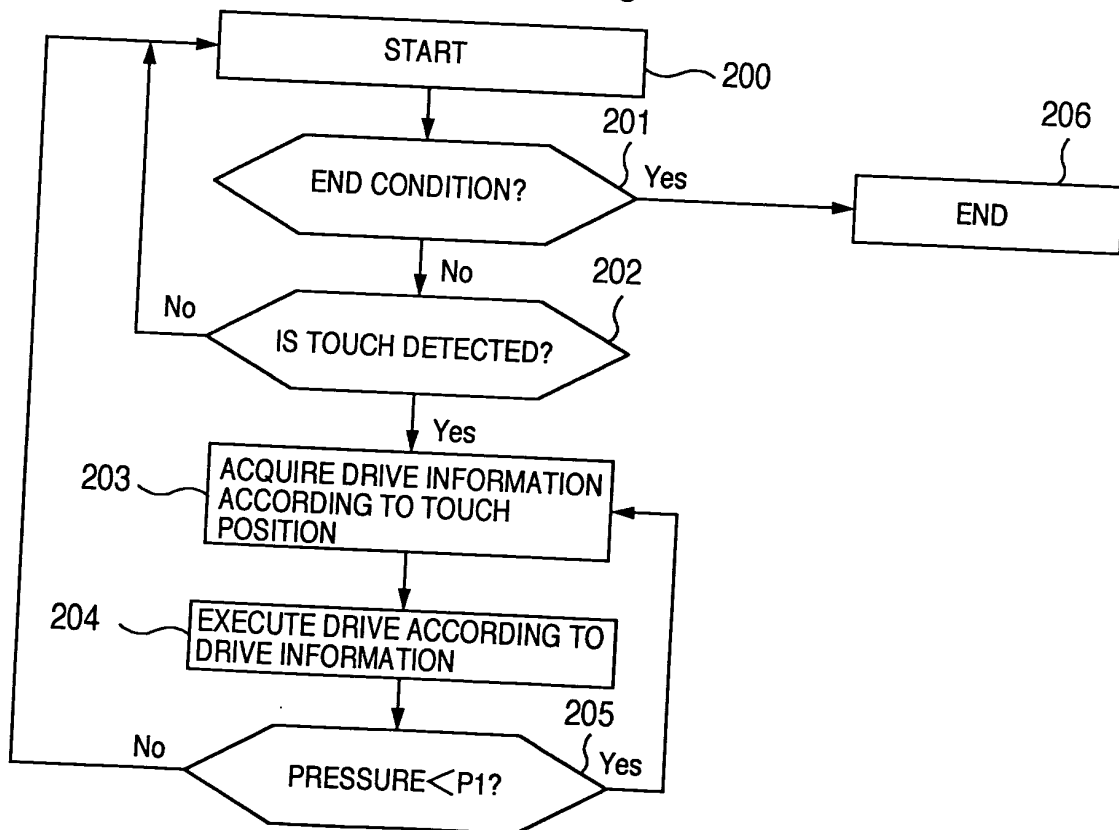 


FIG.17A

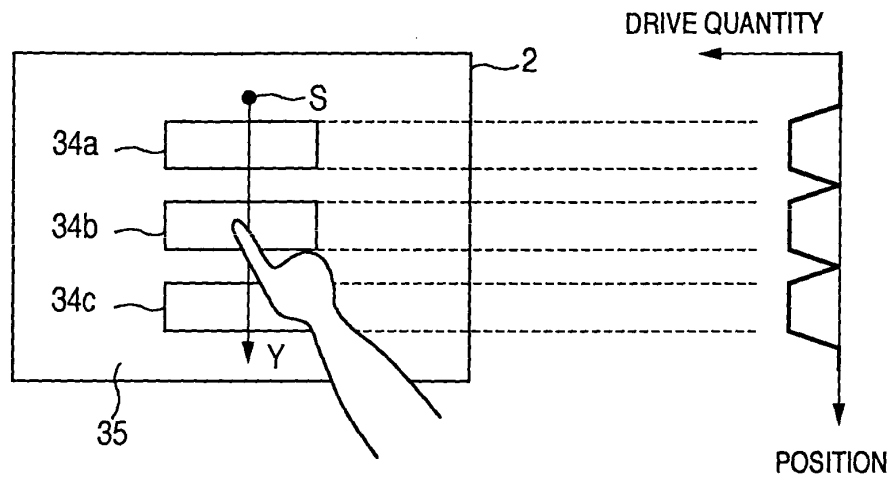 


FIG.17B

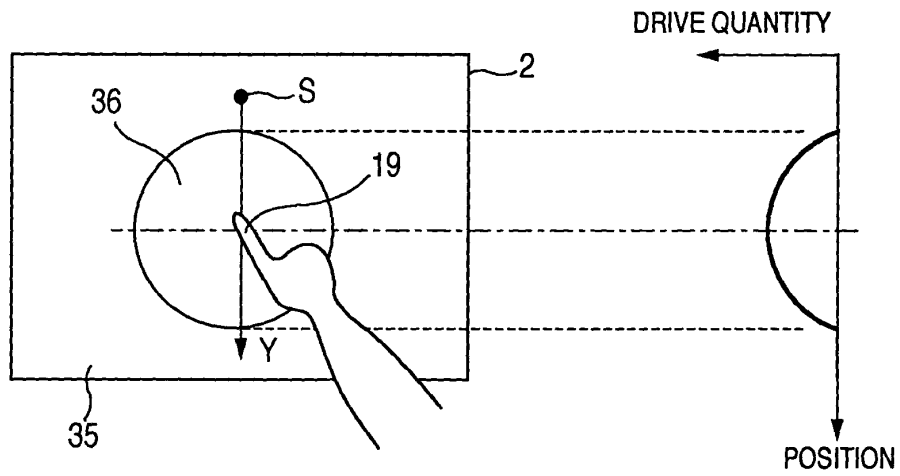 


FIG.17C

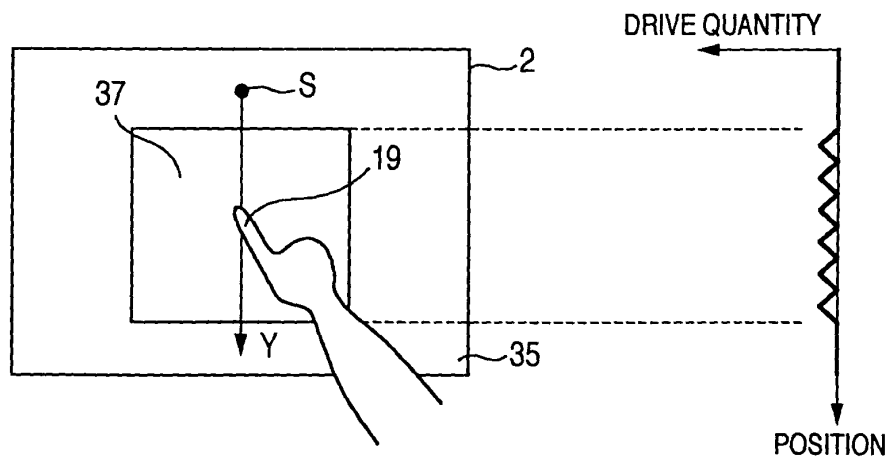 


FIG.18

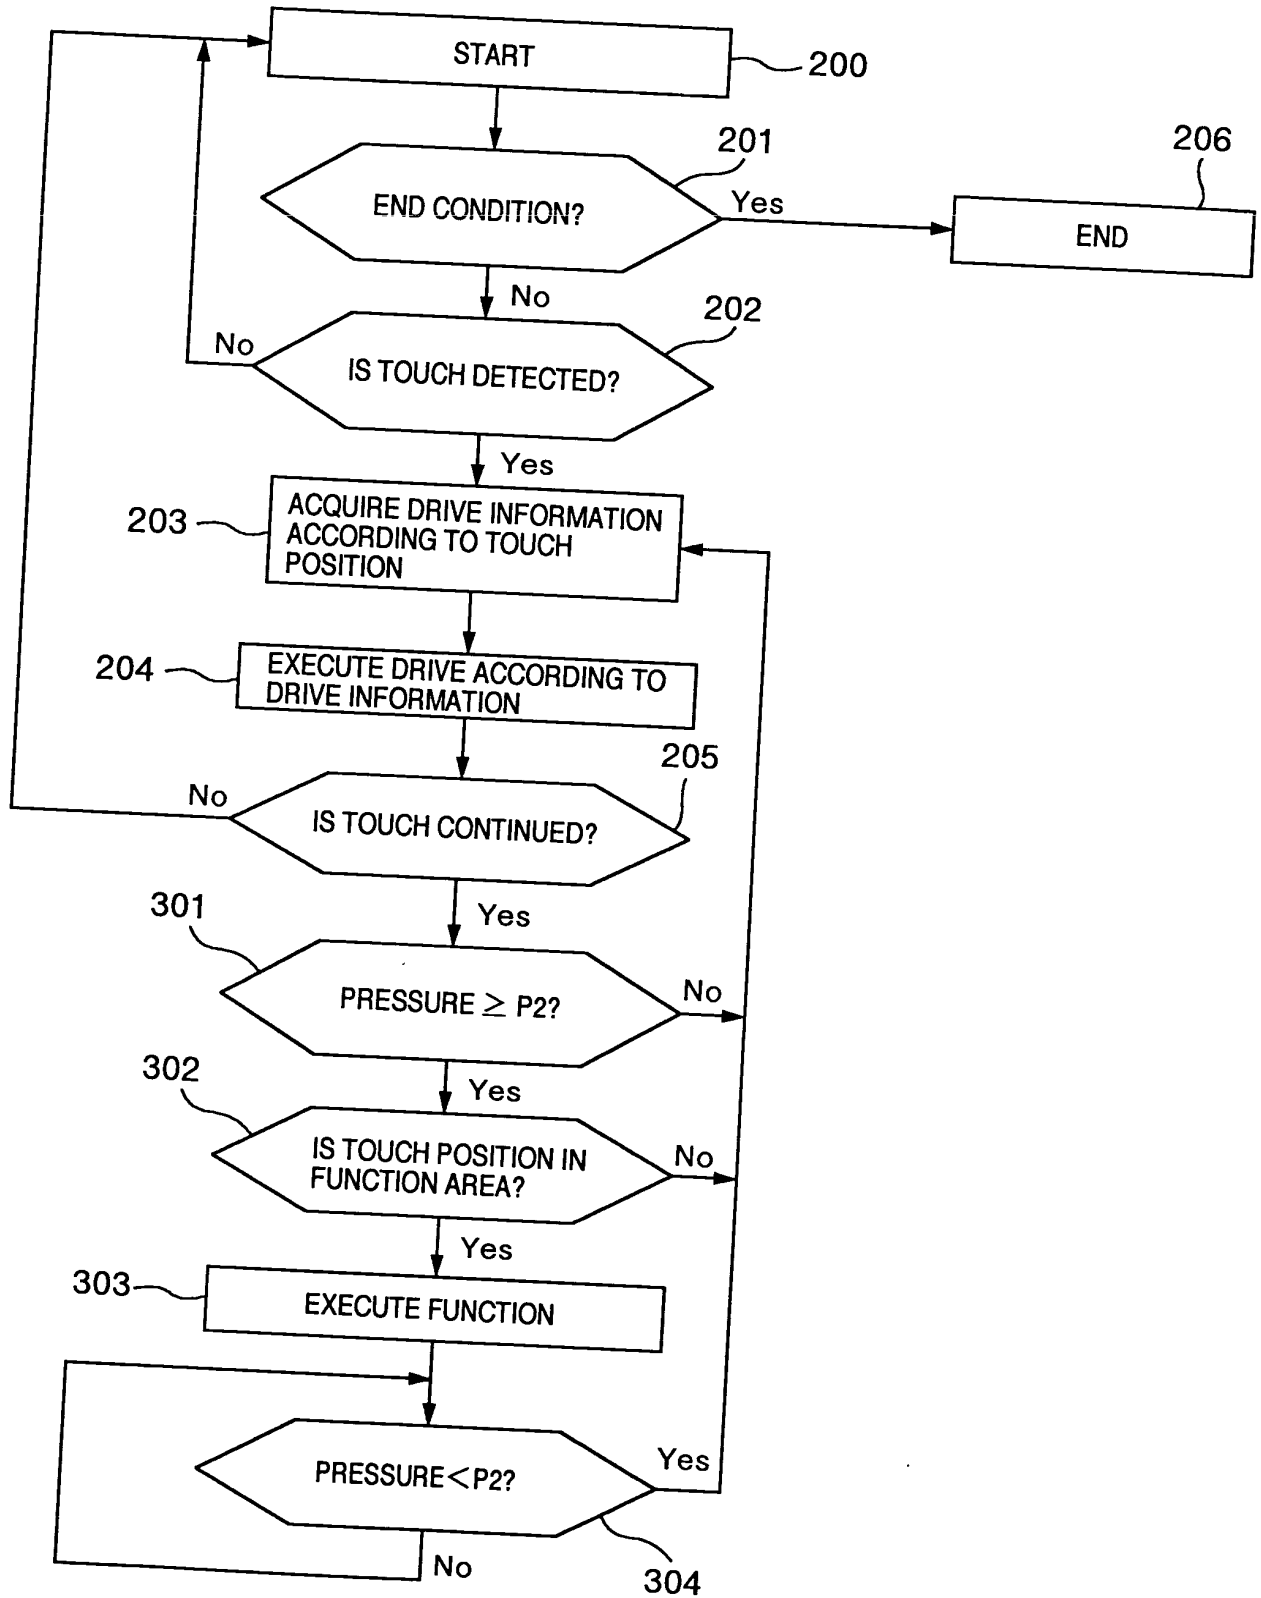 


FIG.19

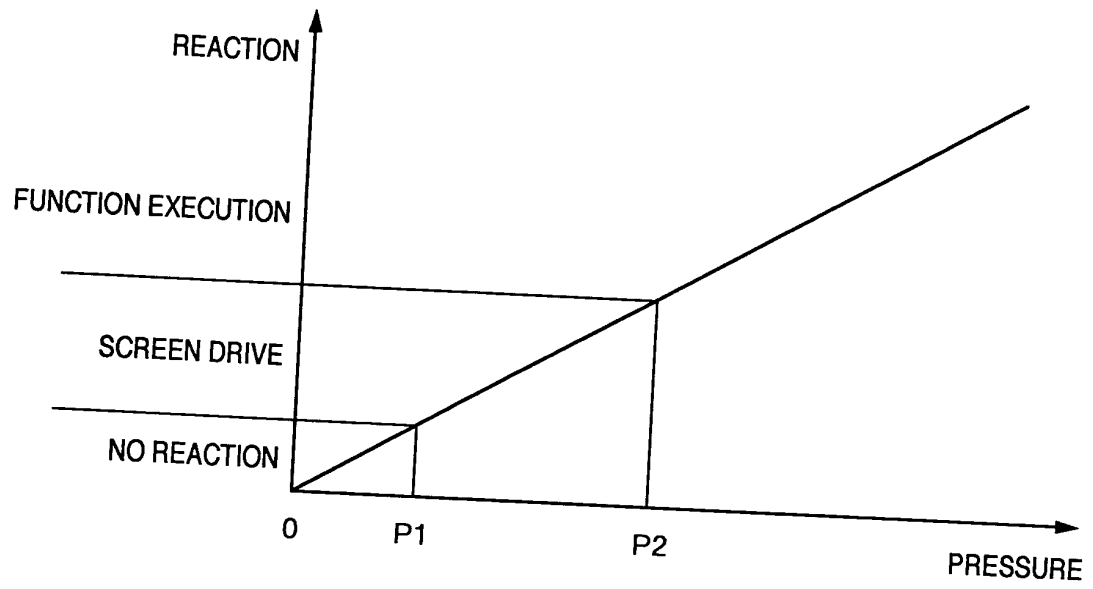 




FIG.20A

 
 
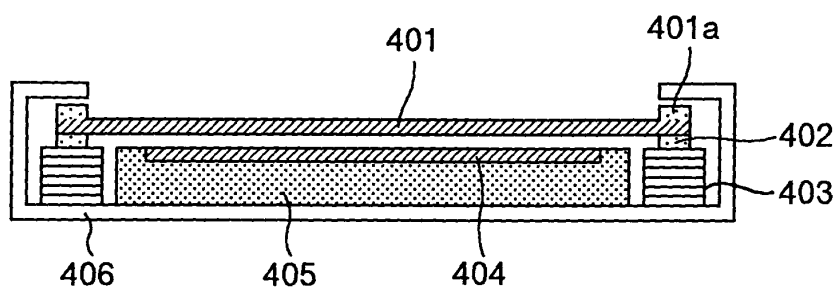 


 
FIG.20B

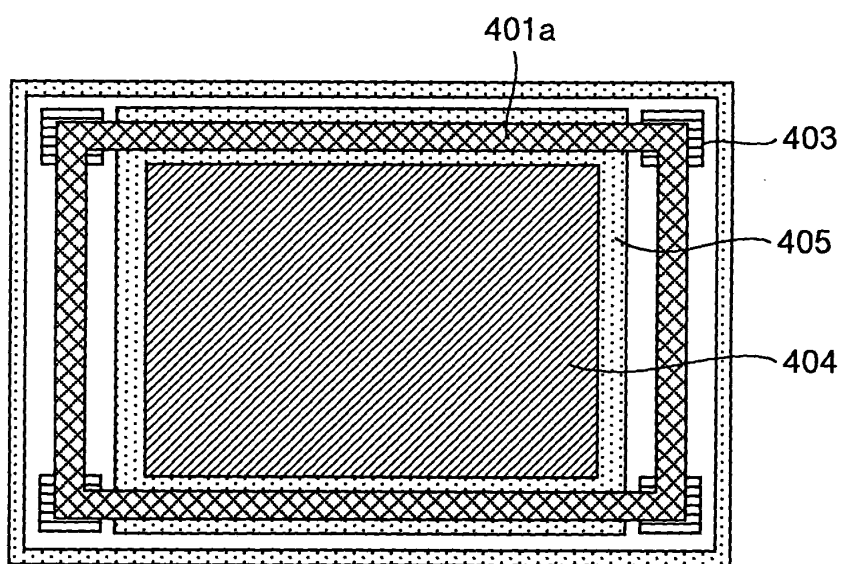

# FIG.21

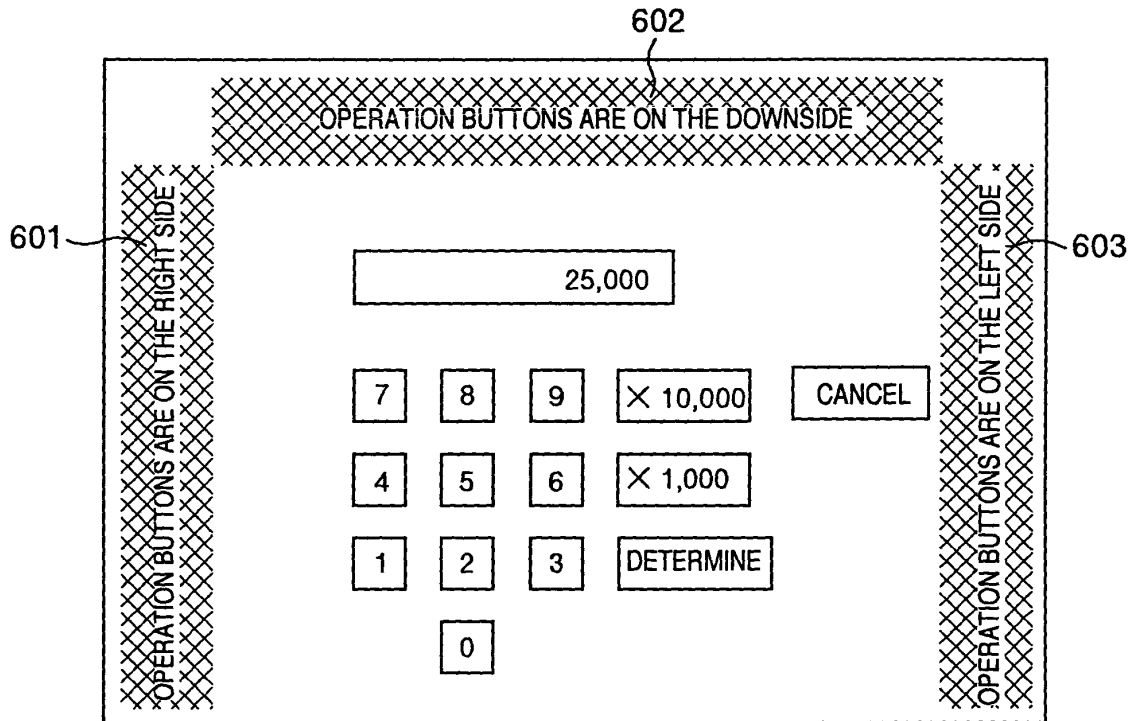

# FIG.22

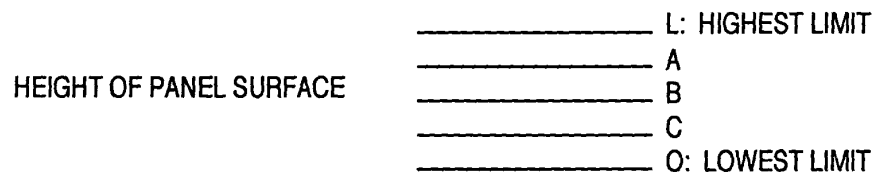

# FIG.23

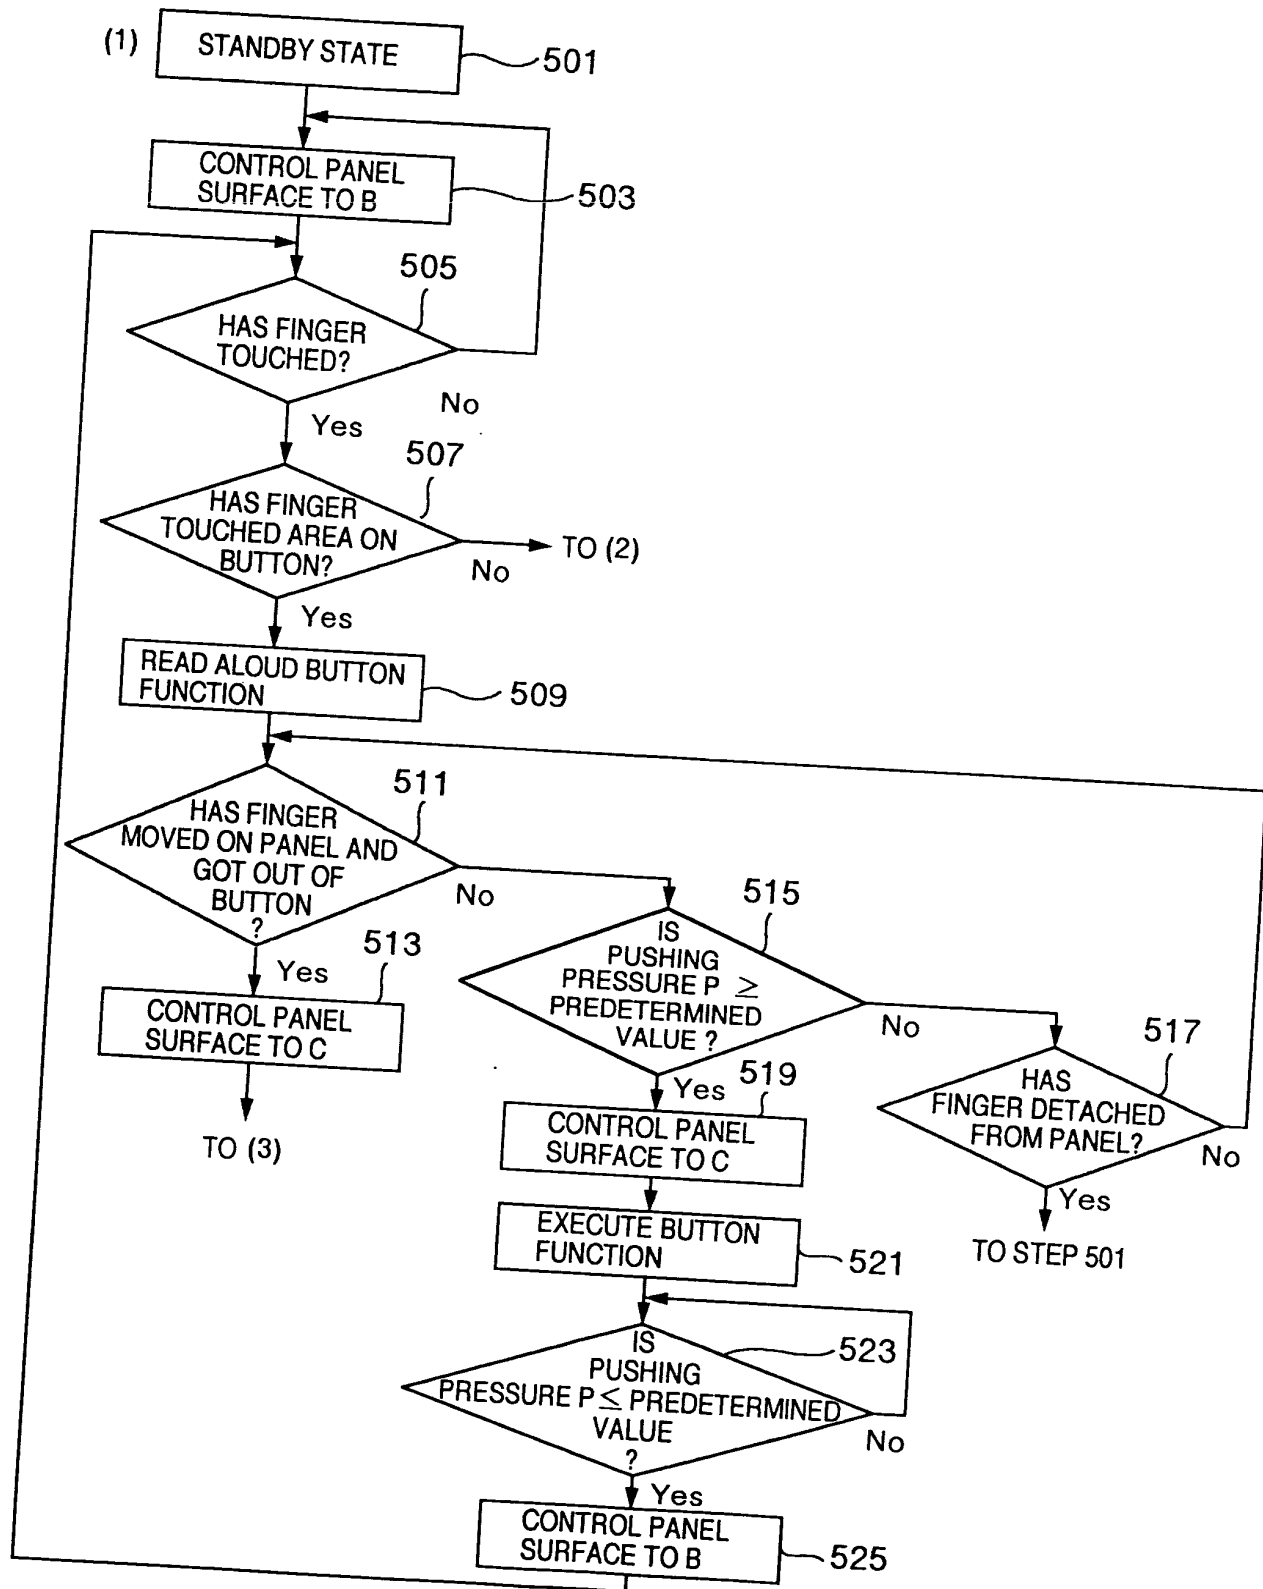 


FIG.24

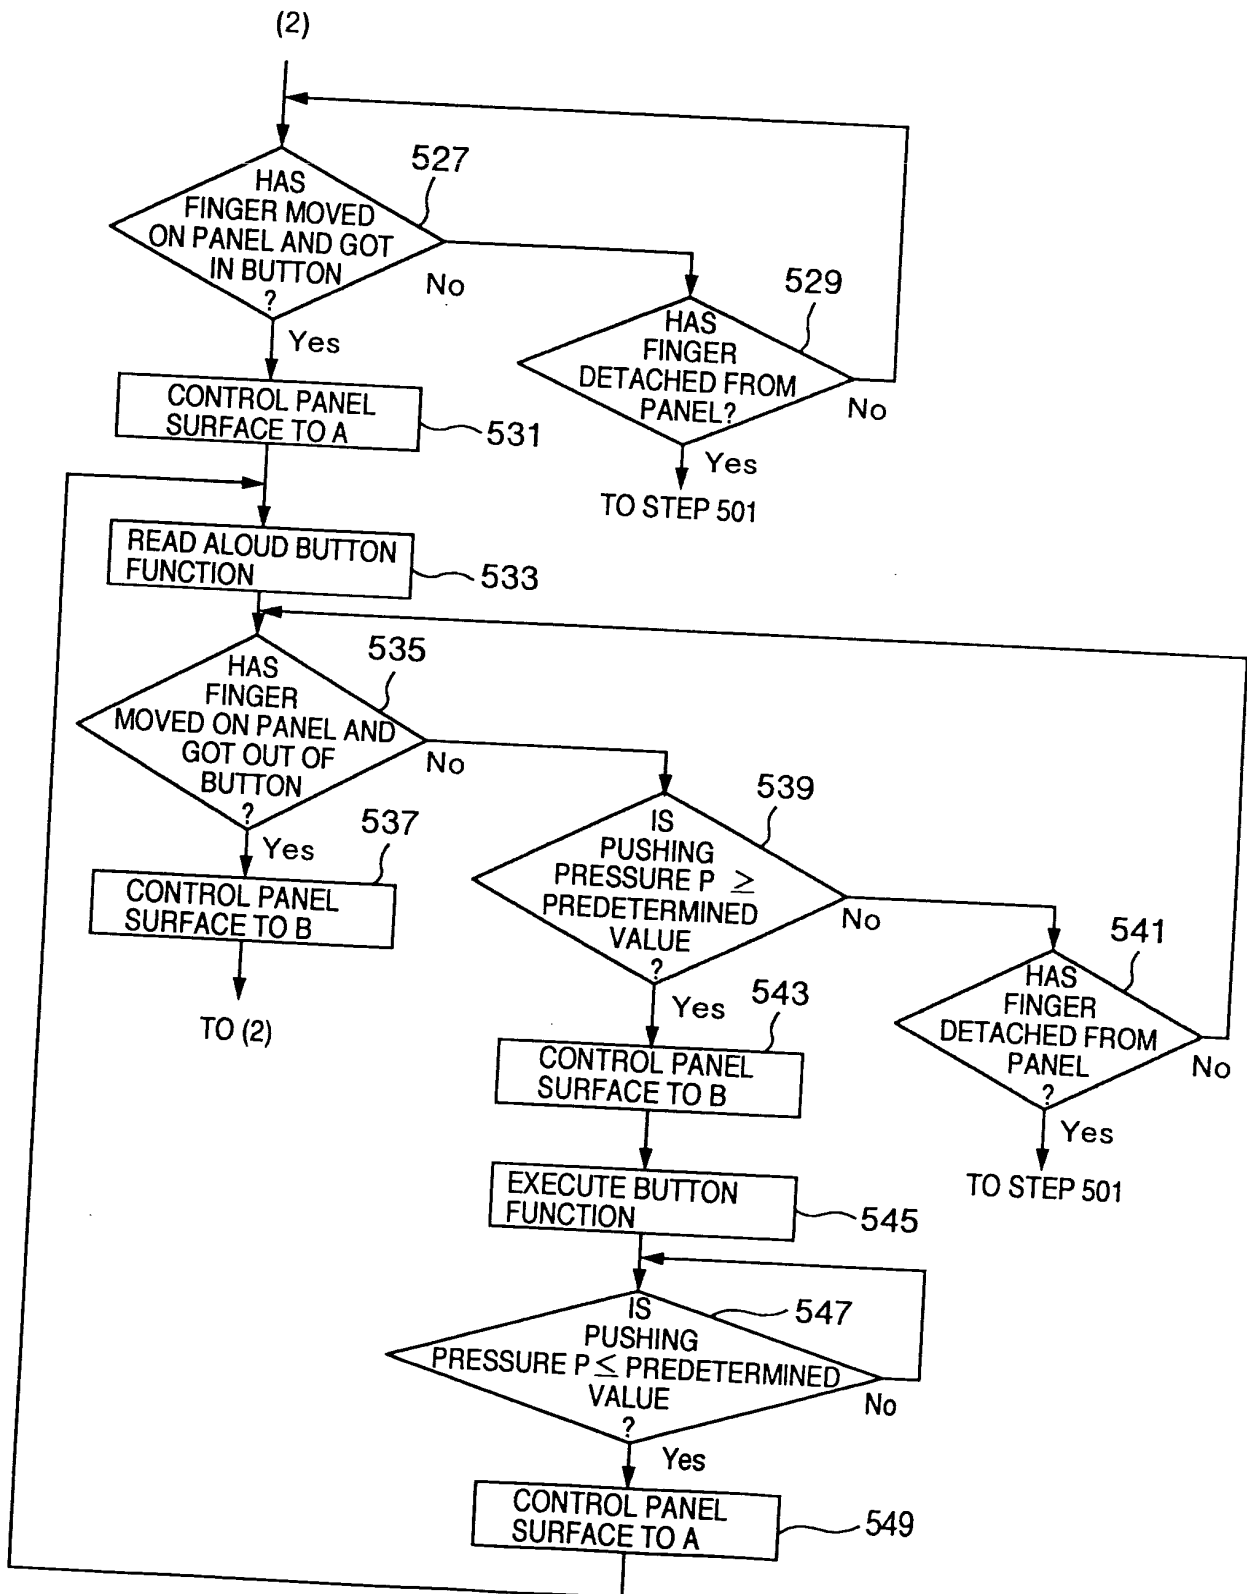 


FIG.25

